

8. Remove the two Torx screws, located over the switch panel. Remove the switch panel.

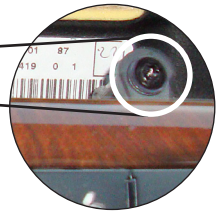



9. Remove the two Torx screws, located over the OEM head unit.

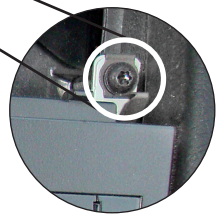

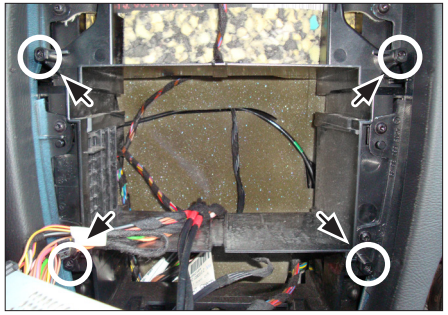

10. Remove OEM head unit.

11. Place the facia plate and fix it with the 4 original screws.

    Push the metal frame into the facia plate.

    Connect all required circuit points and push the double DIN head unit until it snaps in.

    Place the trim frame.

    Reinstall everything in reverse order to finish installation.



© 12/2008 ALL RIGHTS RESERVED. Technical changes possible. No liability for misprints.

Installation Manual
Double DIN Kit
black: 381190-16

• Mercedes C-Class (W203) 2004 ➔

Compatible with double DIN devices

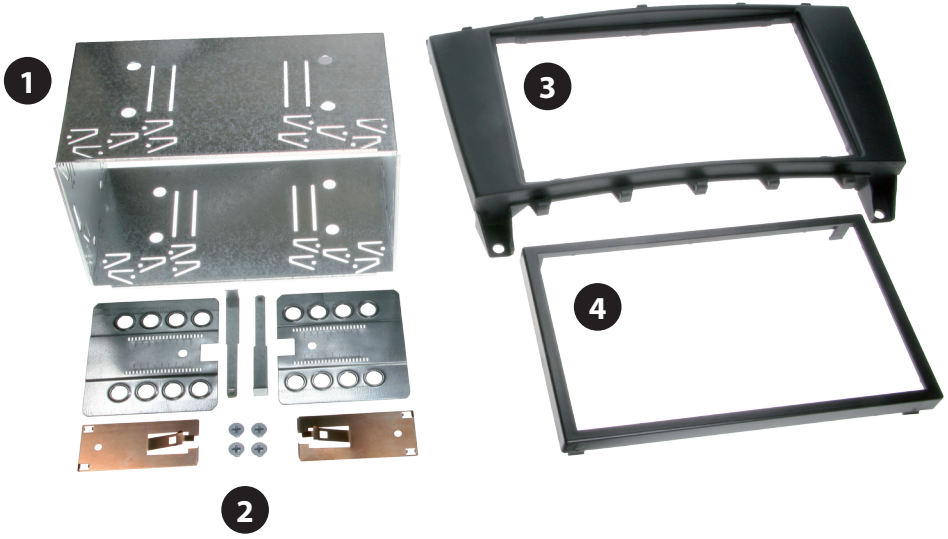

Double DIN Set contents

- (1) Metal Frame
- (2) Installation Kit
- (3) Facia Plate
- (4) Trim Frame



1. Mercedes C-Class with OEM head unit.



2. Remove panel by lifting it up. Remove ash tray.



3. Remove the two Torx (TX20) screws underneath the air condition control unit.

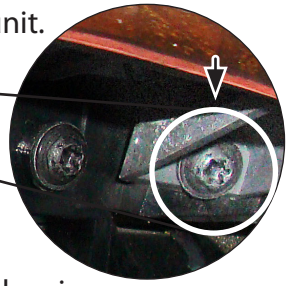



4. Pull out the air condition control unit. Remove the two Torx (TX20) screws under the OEM-Radio.



All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidential or indirect damages.

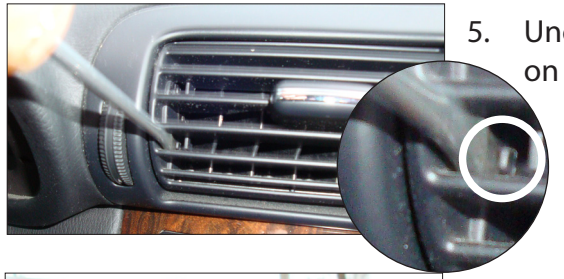

5. Unclip the air vent unit carefully on both sides with a screw driver.

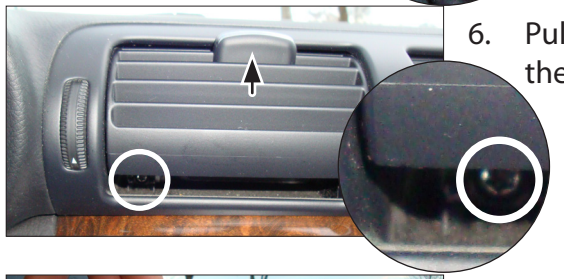

6. Pull up the air vent and remove the 2 screws (left and right) which become visible.



7. Pull down the air vent and unclip the whole unit at both sides carefully with a screw driver.

Remove the air vent unit.

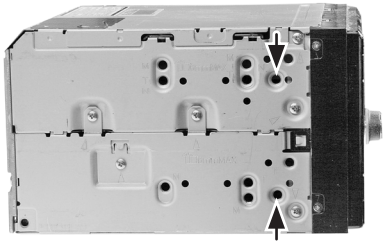

(sample photo)

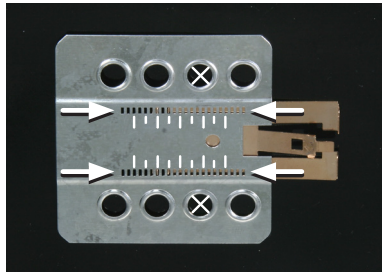

(sample photo)

Mount the metal brackets to the double DIN head unit.

The position of the copper coloured holder can be adjusted to your needs for perfect fit. (see sample)